

MDT Series Temperature Controller

User Quick Start Manual

MDT-01R-R MDT-01T-R


MDT-01R-T MDT-01T-T

MDT-02R-R MDT-02T-R


MDT-02R-T MDT-02T-T

Appearance and Part Name

1.1 Appearance and terminal

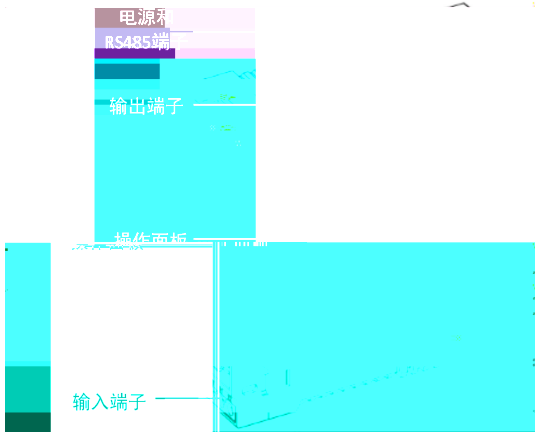

2. Model

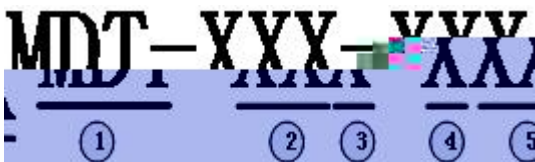

-
-
-
-

3. Installation


3.1 Ambient temperature

3.2 Installation site

3.3 Installation method

i




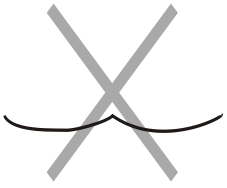


0	0	1	1	2	2	3	3	4	4
5	5	6	6	7	7	8	8	9	9

A	b	c	d	e
F	g	h	i	u
n	l	m	n	o
p	q	r	s	t
v	v	y	z	-


MDT-01R-T

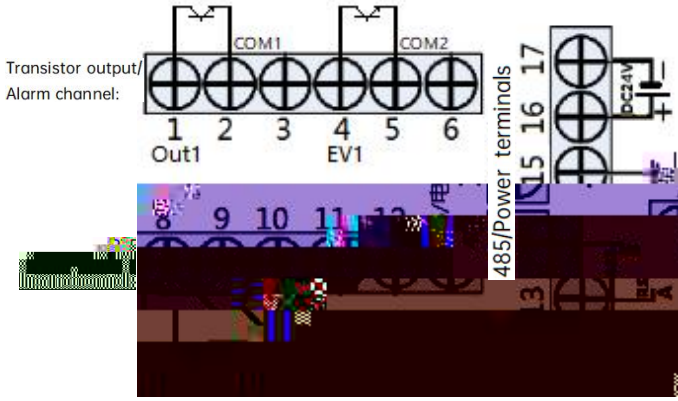


MDT-02R-T:

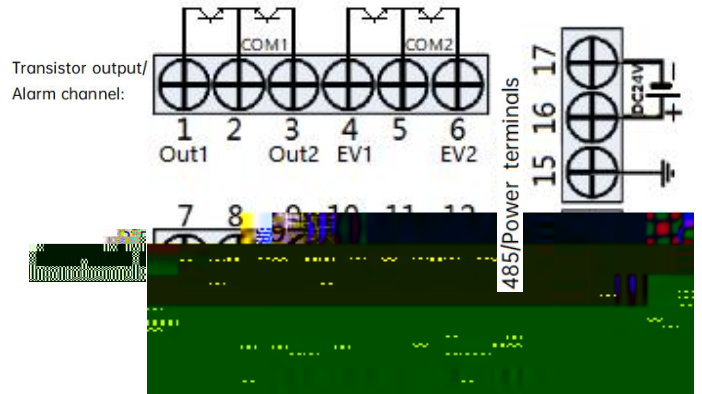


MDT-01T-T

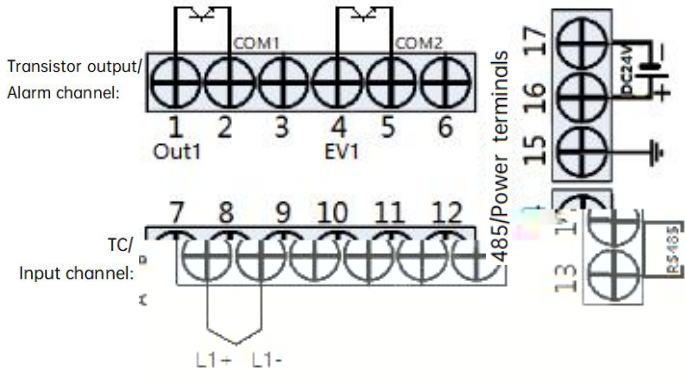

MDT-02T-T:

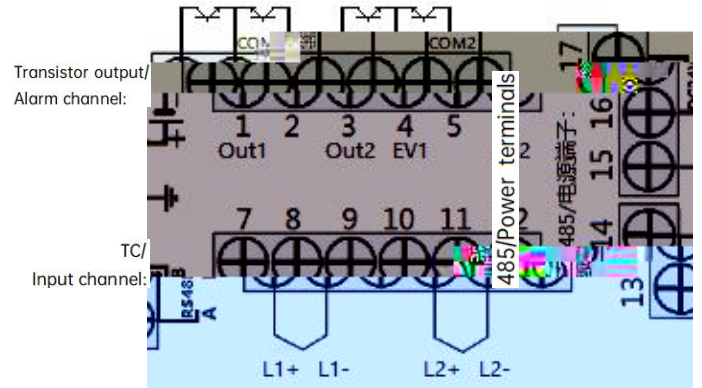

MDT-02R-R:

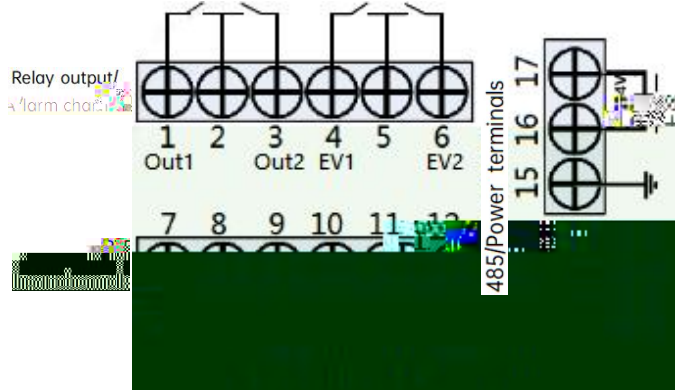

6. Electrical Specification

6.1 Power-supply Specification

6.2 Performance Specification

MDT-02T-R:

